
VAS 6095 Engine and Transmission Holder



Holder VAS6095/1-6

Holder VAS 6095/1-6 can be changed to VAS 6095/1-6a by cutting to size.

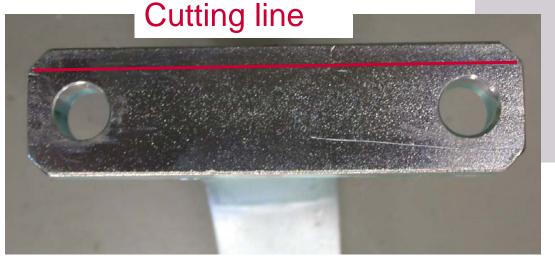

Cut 4.5 to 5 mm off upper side of holder VAS 6095/1-6.

Height of holder -6 = 30 mmHeight of holder -6a = 25 mm